

Let the distance in inches from the left edge of the page to the vertical line be H , and from the bottom edge to the horizontal line be V ; let the lengths of the gaps at the top and bottom of the vertical line be T and B respectively, and the gaps at the left and right of the horizontal line be L and R . For measurements in inches, the proper page device parameters for this printer are set by

```
<< /.HWMargins [ml mb mr mt] /Margins [x y]
>> setpagedevice
```

where

```
ml = L * 72, mb = B * 72, mr = R * 72, mt = T * 72
x = (1 - H) * 720.0, y = (V - 1) * 720.0
```